

# MagicFlow2 CIS™

Property of Alpha Supply Co. – Nashville, TN  
All rights reserved – 2006 Ph: 800-908-9916

## For the Epson C120



### Parts Inventory:

- (1) - Ink Tank
- (1) - Set of cartridges with lines attached to the tank
- (1) - Tube Holder
- (1) - Center Tube Holder
- (1) – Piece of Velcro (*not shown*)
- (5) - Filters
- (5) - Tank Plugs
- (4) - 10ml Syringes (*not shown*)


These instructions were printed using our **TransMagic!**™ Inks on **TruePix** high definition paper for optimum clarity.

**Note** - If you have been using another bulk system, be sure to remove any parts left in or on the printer such as chip bars, tube holders, etc...

Install all of the tank plugs into the large holes except one. Fill the tank using a syringe with the correct color up to 1" from the top and place the rubber plug into the large hole only. Place the filters in the small holes (large end down).



To prime the ink cartridges, remove the plug on the top of the cartridge and place your syringe in the hole. Slowly draw air out of the cartridge to force ink to be pulled in to the cell until full. Replace the plug when done. Do this for each color. **NOTE – Pulling slowly will minimize air bubbles in cartridge and help speed up the time it takes to get a good nozzle check.**

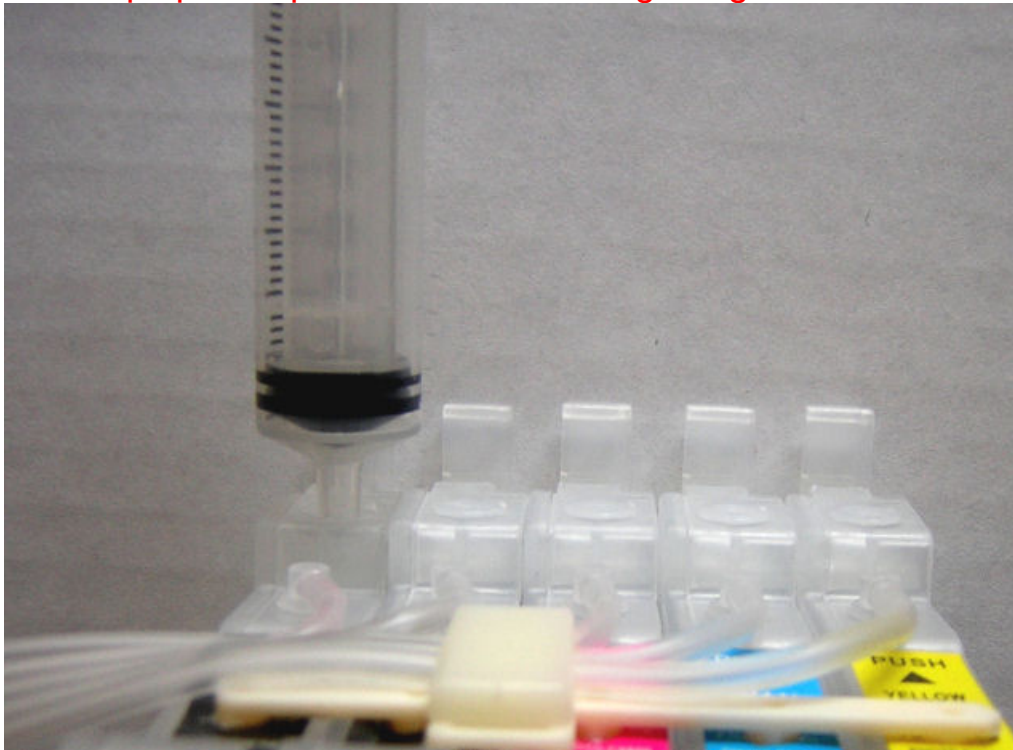

## Installing the Cartridges -----

First we need to remove the cartridge lid to allow our tubes to supply the cartridges.

Pry the little plug in the upper right corner off of the machine.



Install the cartridges into the printer and press each cartridge until they click into place. Place the Velcro strip on the left side of the printer as shown.



Place the center tube holder as shown in the picture 4 /12” from the red arrow. Place tubes into the holders and align the mark on the tubes with the left hand side of the holder.



Press the ink button to begin the charging process. The printer will eventually stop with a solid green light.

To complete the install, go to the printer folder located in the control panel and right click on your printer and choose “Printing Preferences”. Use the nozzle check utility located under the maintenance tab and follow the on-screen instructions to get a perfect nozzle check. It may take between 3-8 sets of head cleanings and nozzle checks to get a perfect pattern

**\*Note – Do not do more than 10 head cleanings per hour**

***Note – The tank must remain on the same table as the printer or the same level as the printer at all times. Failure to do so may result in damage to the printer and/or loss of ink.***

**If you need help contact:  
Alpha Supply Co.  
800-908-9916**

These instructions were printed using our **TransMagic!** Inks on **TruePix** high definition paper for optimum clarity.

**TIP** – Using TruePix high definition paper for print proofing will give you outstanding results in print quality without the high cost of similar papers. TruePix paper is only 17.5¢ per sheet compared to 75¢ per sheet photo paper

### Completed installation of the MagicFlow! System

